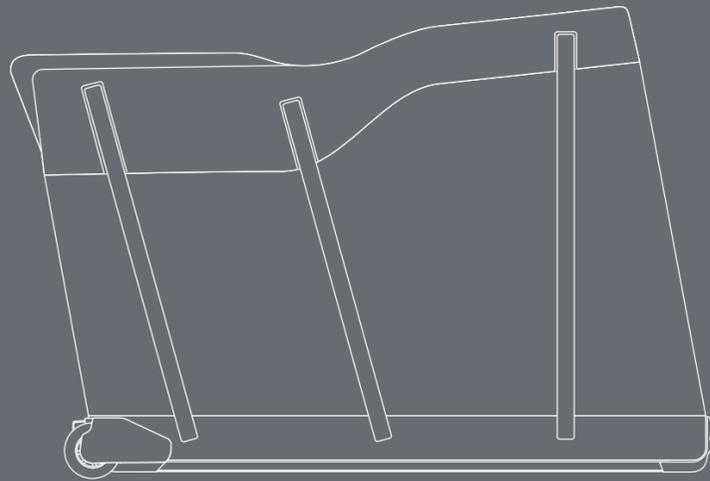




**INSTRUCTION MANUAL FOR PACKING
A ROAD- OR TRIATHLON BIKE IN
YOUR ROAD BIKE BAG PRO**



ENCLOSED PARTS ROAD BIKE BAG PRO

- 2 x TUBE STICKS
- 5 x STABILIZER STICKS WITH PULL-TAB
 - 62cm (1)
 - 70cm (2)
 - 61cm (3)
 - 79cm (4)
 - 82cm (5)
- 5 x STABILIZER STICKS WITH PULL-CORD
 - 82cm (6)
 - 79cm (7)
 - 61cm (8)
 - 70cm (9)
 - 62cm (10)

- 4 x WEBBING LOOPS
- 1 x CLIP-ON WHEEL

- 1 x COCKPIT PAD
- 1 x SIDE IMPACT ABSORBER

ENCLOSED PARTS ROAD BIKE STAND

- 2 x ALUMINIUM RAILS
- 1 x REAR HUB
- 1 x FRONT HUB

- TOOLS NEEDED
- PEDAL WRENCH
 - ALLEN KEY

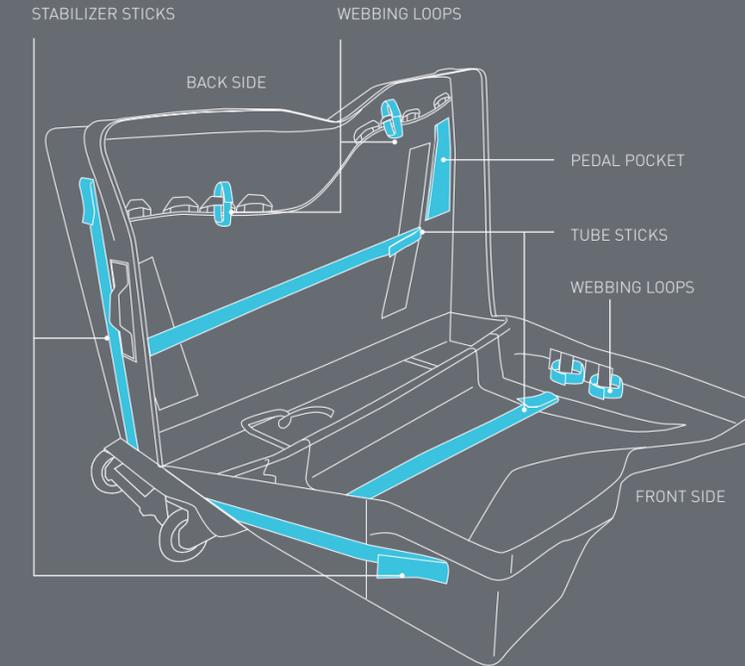
ENCLOSED PARTS ROAD BIKE STAND

- 6 x FRONT AXLE ADAPTERS:
 - 2 x QR 5 mm
 - 2 x Thru axle 12 mm
- 3 x REAR AXLE ADAPTERS:
 - 5 x 130 mm
 - 12 x 135 mm
 - 12 x 142 mm

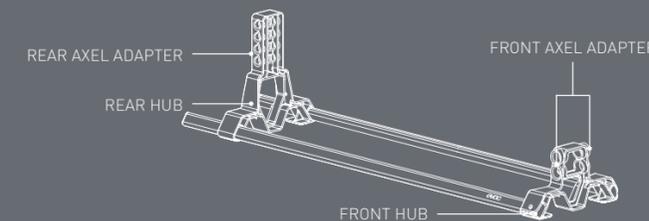
CHOOSING THE RIGHT ADAPTER ACCORDING TO YOUR AXLE

Front axle adapter		Rear axle adapter	
QR 5 MM	classic quick release	5 x 130 mm	classic quick release
Thru axle 12 mm		12 x 135 mm	
		12 x 142 mm	

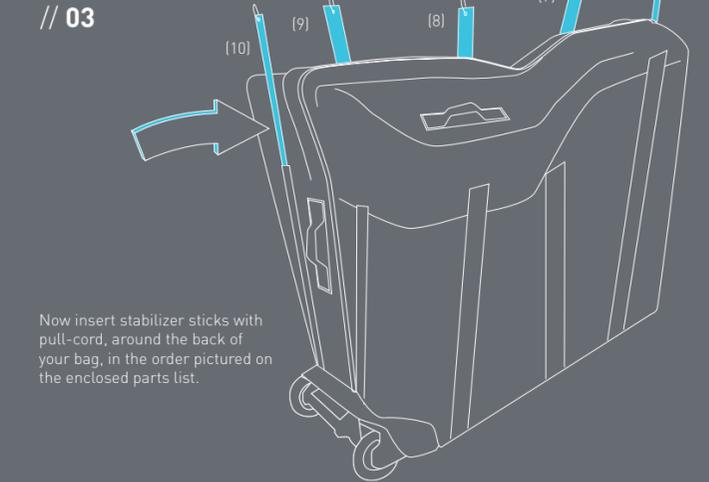
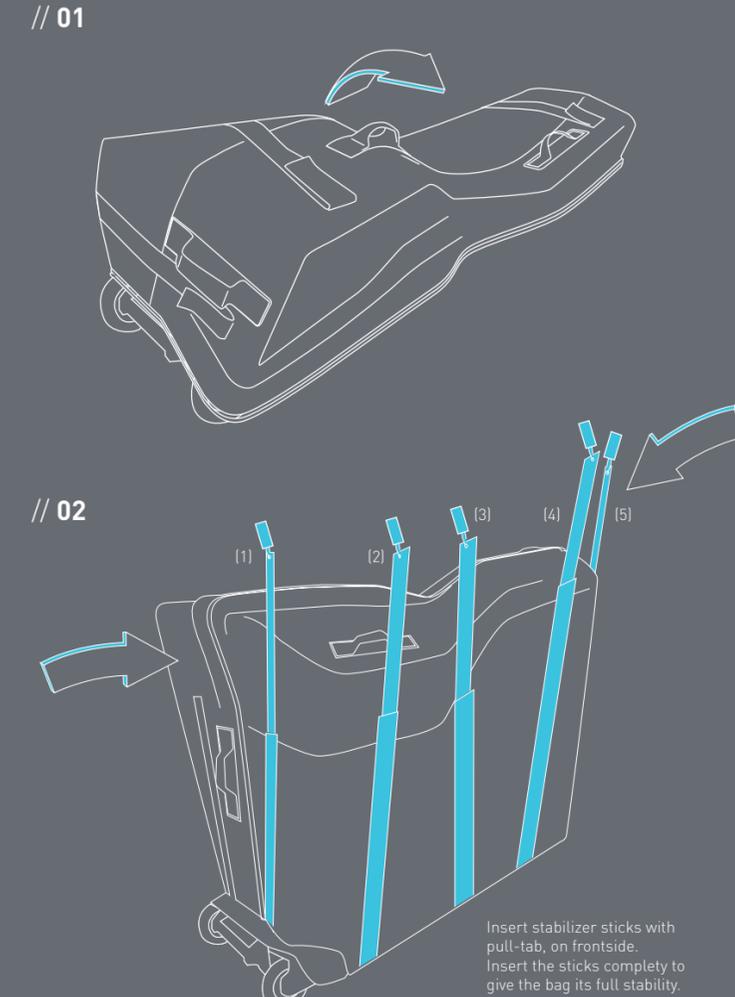
ROAD BIKE BAG PRO



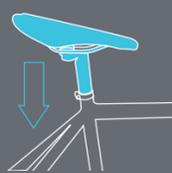
ROAD BIKE STAND

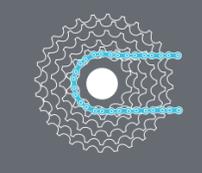


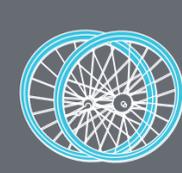
HOW TO ASSEMBLE YOUR ROAD BIKE BAG PRO

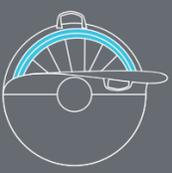


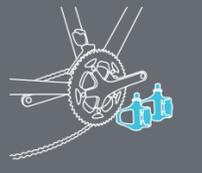
BIKE PREPARATION

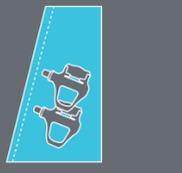
// 05  If needed lower, or remove your bicycle saddle

// 06  Chain on smallest sprocket

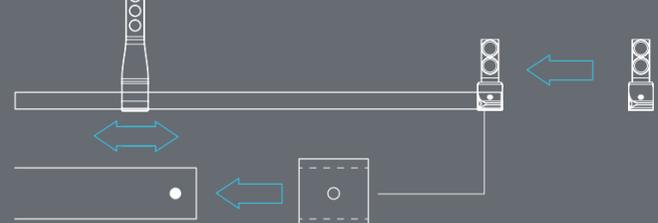
// 07  Remove both wheels

// 08  Place wheels in wheel bags

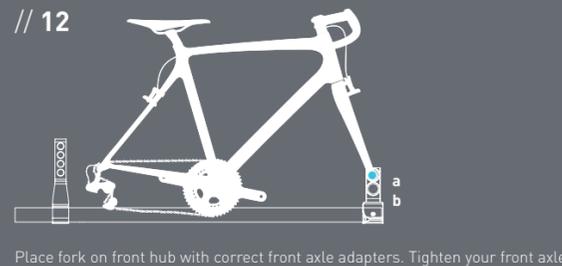
// 09  Remove both pedals

// 10  Put pedals in pedal pocket

HOW TO ASSEMBLE YOUR ROAD BIKE STAND

// 11 

MOUNTING YOUR BIKE ON ROAD BIKE STAND

// 12  Place fork on front hub with correct front axle adapters. Tighten your front axle.

// 13

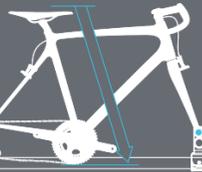
a)  Top level

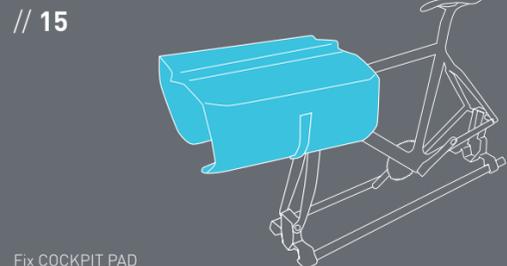
b)  Low level

// 14

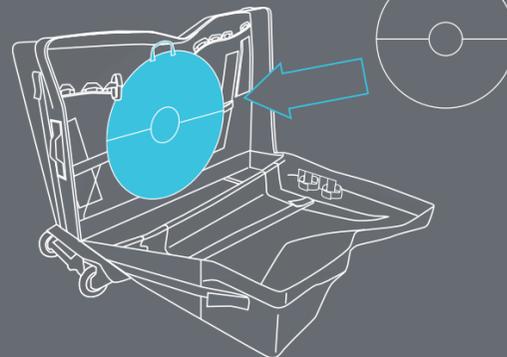
c)  Adjust position of rear hub according to your wheel base. Place rear drop-outs on rear hub with correct rear axle adapter. Tighten your rear axle.

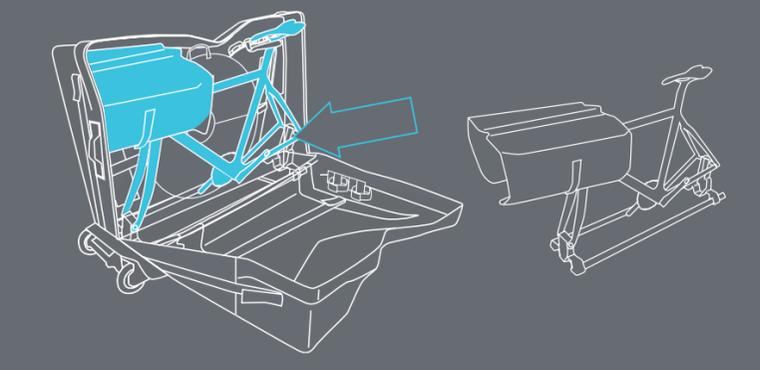
d)  Always choose lowest possible level at rear hub according to chain wheel size.

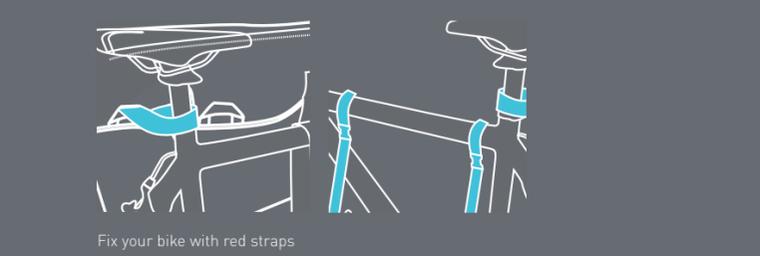
e)  Maximum length from seat top to bottom of chainring is 86cm. Maximum wheel base is 106cm.

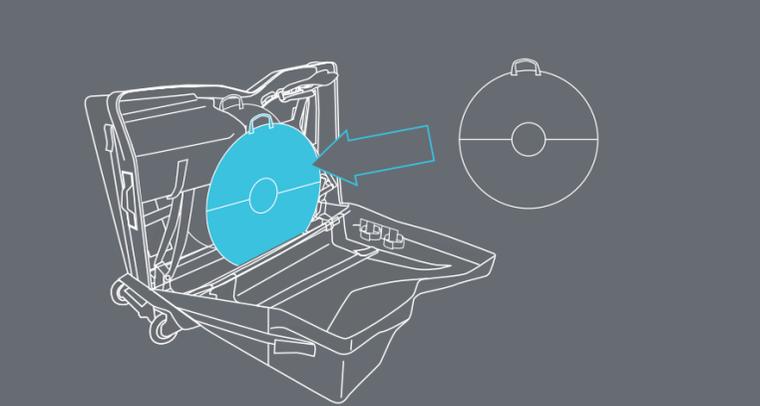
// 15  Fix COCKPIT PAD

// 16  Place your bike and WHEEL BAGS in your ROAD BIKE BAG PRO (one WHEEL BAG behind and one in front of your bike)

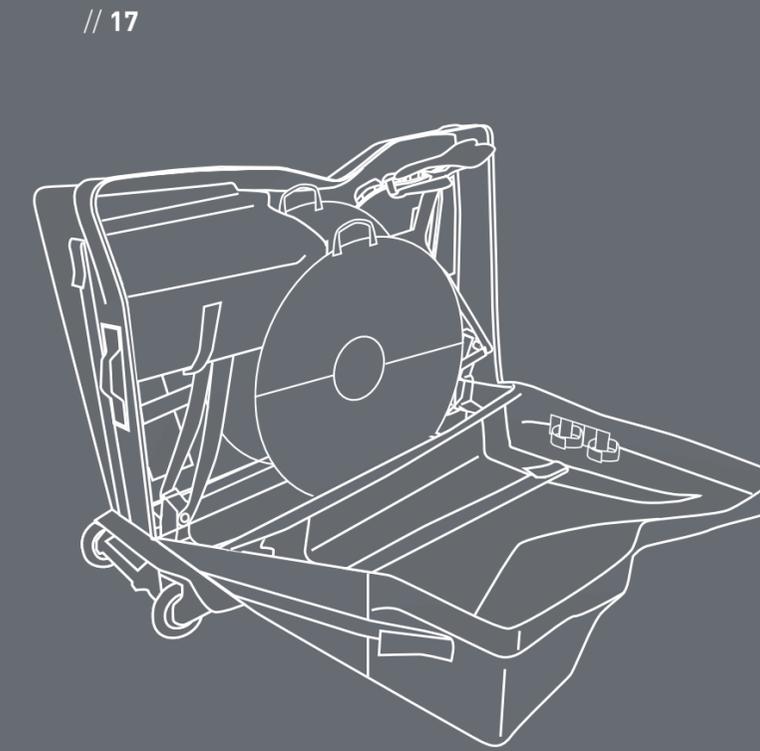




 Fix your bike with red straps

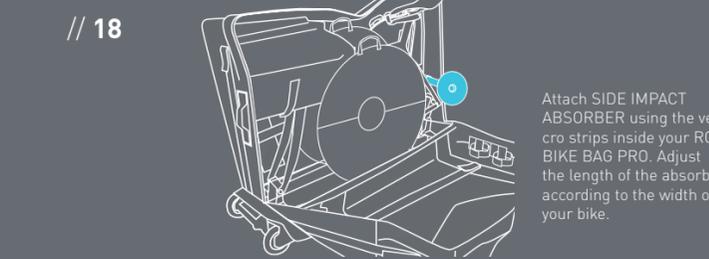


ROAD BIKE BAG PRO

// 17 

Looks like this?
Almost done!

ROAD BIKE BAG PRO

// 18  Attach SIDE IMPACT ABSORBER using the velcro strips inside your ROAD BIKE BAG PRO. Adjust the length of the absorber according to the width of your bike.

HOW TO USE THE CLIP-ON WHEEL

// 19 

Click CLIP-ON WHEEL to ALUMINIUM FRONT HANDLE SYSTEM. Pin has to go into feed holes!

Remove CLIP-ON WHEEL before luggage drop and put back into the outside pocket at the front of your ROAD BIKE BAG PRO

WARRANTY AND AFTER SALES SERVICE



WARRANTY
www.evocsports.com/service/warranty